


MODEL: WA270-7 → WA500-7

FEATURE: REVERSING FAN

STD/OPT: STANDARD


SUGGESTED SETTING: DEFAULT = MODE A

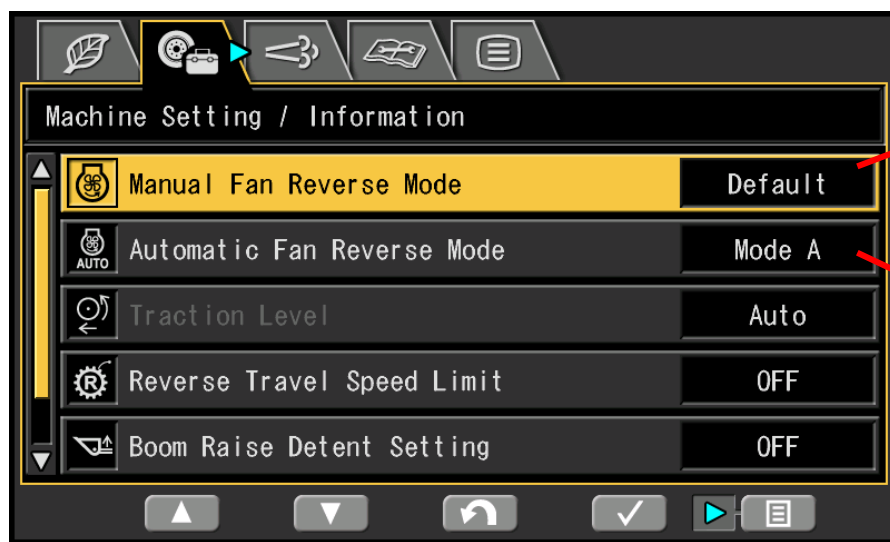

Manual Fan Reverse



Automatic Fan Reverse

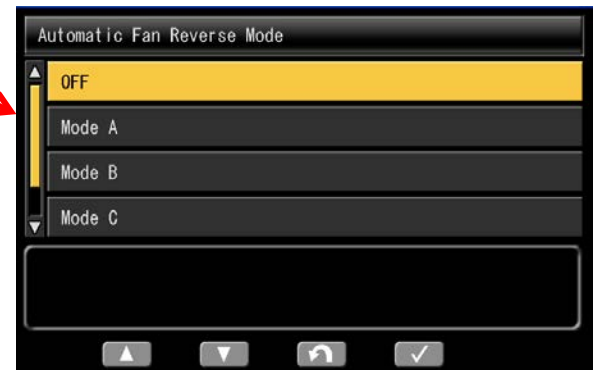

Tier 4 Interim loaders are equipped with an automatic reversing fan. This helps keep the coolers clean while operating. When in Auto Reversing mode, the operator is not burdened with having to manually reverse the fan periodically.

How long or how often the fan should be reversed, depends on the current job conditions and ambient temperature. If the machine is getting hot, the fan may need to be reversed more often.

The default setting for the auto-reversing fan is to reverse for 1 minute for every 2 hours of operating time.

When the fan runs in reverse it is possible to see a temporary increase in coolant temperature, for this reason it is recommended to reverse as little as possible.

*The WA200-7 also has an auto-reversing fan, however the control of which varies slightly due to the different monitor and controls.