

TIP OF THE WEEK

MODEL **PC78US-10 – PC2000-8**
FEATURE **AUTO-IDLE**
STD/OPT **STANDARD**
SUGGESTED SETTING **ACTIVATED**

Auto Idle activation icon in monitor

Auto Idle Button



When activated, the Auto Idle function automatically lowers the engine speed to low idle to reduce fuel consumption.

When the control levers and travel pedals are in the NEUTRAL position for more than 4 seconds auto idle activates and illuminates an indicator icon in the monitor. Each time the switch is pressed, the auto idle control is switched between ON and OFF.

If any lever or pedal is operated while auto idle is active, engine speed will return to the engine speed selected with the throttle dial.

The Auto-Idle switch automatically lowers the engine speed to low idle to reduce fuel consumption when the control levers and travel pedals are in the NEUTRAL position for 4 seconds.

The Auto Idle function may be called Auto Deceleration on some models.

For additional information, please consult the Product Bulletin, Operator's Manual or Shop Manual.
 Photos may include optional equipment.