


# TIP OF THE WEEK

MODEL .....D61/61i-24, D65/65i-18, D85-18, D155/155i-8  
 FEATURE .....OPERATOR SEAT ADJUSTMENT  
 STD / OPT .....STANDARD  
 SUGGESTED SETTING .....OPERATOR PREFERENCE

## The standard air suspension seat has 7 adjustments to increase operator comfort.

During machine demo, have the operator sit and make adjustments. Key switch must be ON to power the air compressor. Pull height lever ("H") up until the diagonal line crosses the center of indicator window.

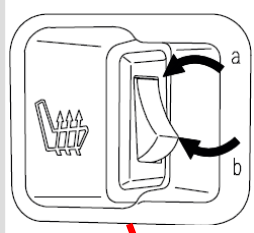

**Seat Heater Switch**  
 thermostat controlled:  
 Position (a) is OFF, position (b) is ON.  
 When ON it warms the seat surface @ 50° F or less and shuts OFF @ 68° F or above.



Lumbar Support


Slide Fore/Aft  
6.3"

Tilt Fore/Aft  
± 5°

Seat Back Recline



Height Lever "H"  
(Air Pump)

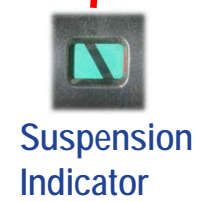

Suspension Indicator

Rotate Right 12.5° (D65 and larger) or Straight Ahead\*

*\*Note: For D65 and larger models, it is recommended to pull LH console forward by actuating lever, at (1) when angling the seat 12.5 degrees to the right.*

For additional information, please consult the Product Bulletin, Operator's Manual or Shop Manual. Photos may include optional equipment.

